


TCIL TRAFFIC CONTROLLER INDICATOR

Installation Instructions


(For LED Light Engines, Horizontal or Vertical Units)

Standard Wall Mount


- Remove the cover from the housing by unscrewing the four retaining screws on the front of the unit.

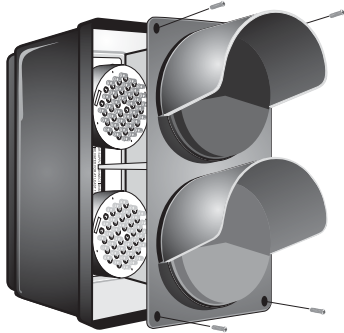

- Carefully remove the raceway by unscrewing the two screws located between the sockets.
- Using a screwdriver knock out the holes in the housing for screws and conduct.

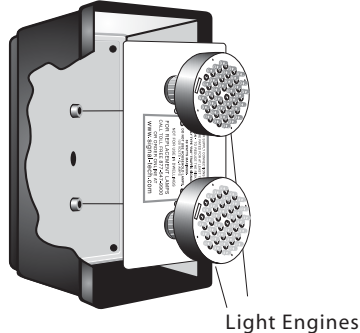



- Mount the housing securely to the building structure using four appropriate fasteners (not supplied).
- Make wiring connections, see diagram below for optional control switch.
- Attached raceway with the two screws removed above, install supplied LED light engine(s), and replace the cover and four retaining screws.

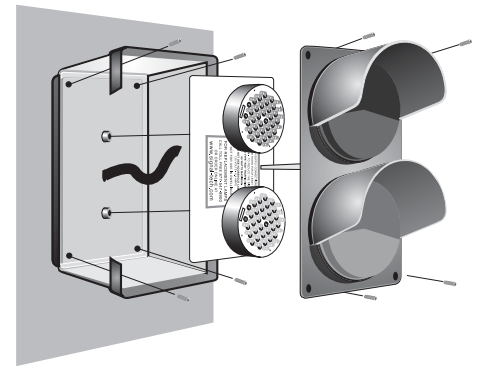

Note: Make appropriate wiring connections per local codes.

Optional Control Switch - Wiring Schematic

Wiring diagram for teller control switch with three position switch and green and red indicator lights.

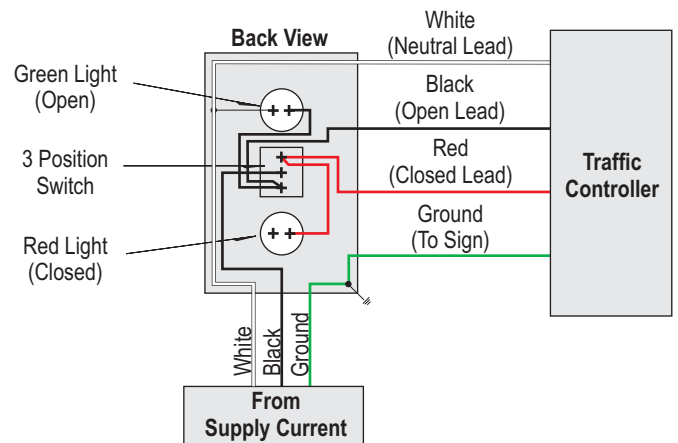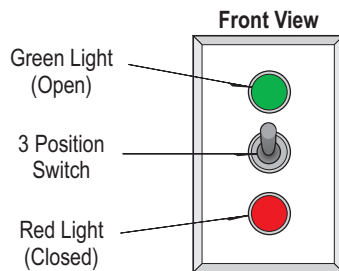

For Supply Connections Use Wire Rated
For At Least 110° C
120 Volts 0.6 Amps
Replace with 69 Watt Bulbs Maximum