 


# Mounting

## Installation Instructions

### What You Need:

Philips head screw driver or bit  
Driver for fasteners  
Fasteners to attach mounting to wall surface  
(fasteners not supplied)



## Center/Double Post Mount

 
**Step 1.** Bolt baseplate(s) to pad or bury post(s) as appropriate for location.

**Step 2.** Slide sign mounting bracket into post channel(s).


**Step 3.** Align the cabinet flush with top of the post(s).

**Step 4.** Tighten the set screw in the mounting bracket(s) and fasten the post cap(s) on the post(s).


Half-Round  
4-Slot Post

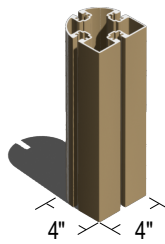


Square  
4-Slot Post

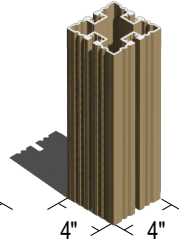 




Half-Round  
1-Slot Post

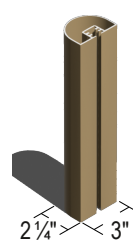 


Rectangular  
2-Slot Post

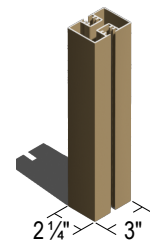 


Rectangular  
1-Slot Post

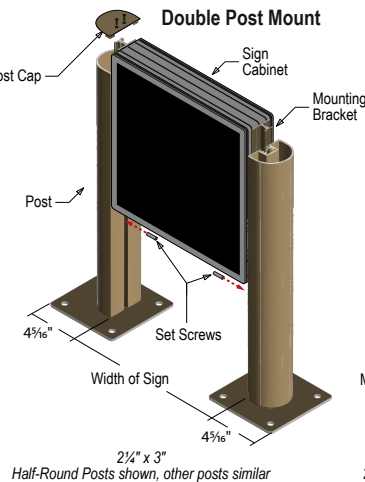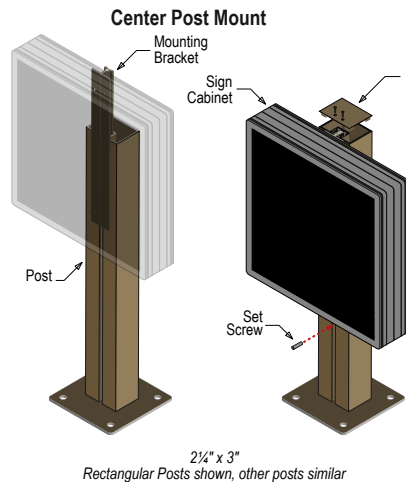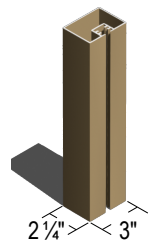   

6 x 6 Base Plate Detail

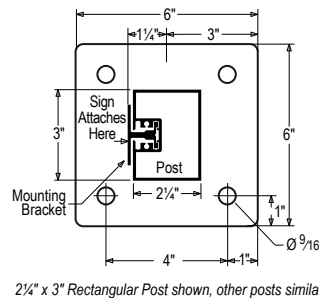 

11 3/4 x 11 3/4 Base Plate Detail

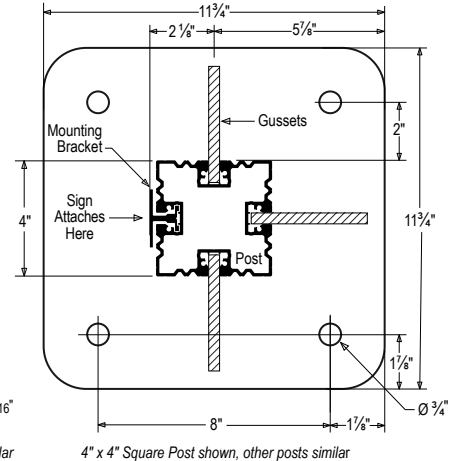 

## Side/Ceiling Mount for 2 1/4" & 2 1/2" d Frames

 
**Step 1.** Open sign by removing the screws on bottom of cabinet. Remove the back panel.

**Step 2.** Knock out appropriate mounting holes in the back panel. Align back panel mounting holes with long side of brackets and screw in place. (fasteners provided)


**Step 3.** Mount the shorter side of the brackets to the wall or ceiling surface. (fasteners not supplied)

**Step 4.** Hinge sign on to back panel, close cabinet and replace the screws that were removed in the first step.


For 2 1/4" & 2 1/2" d  
Frames

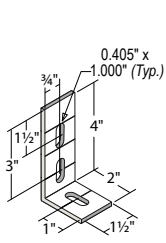

Ceiling Mount

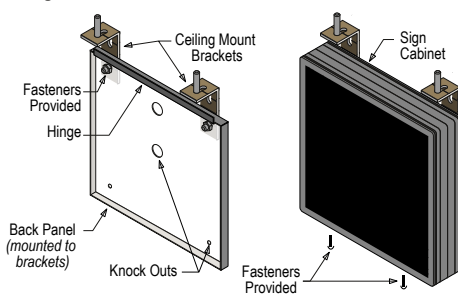 

Side Mount

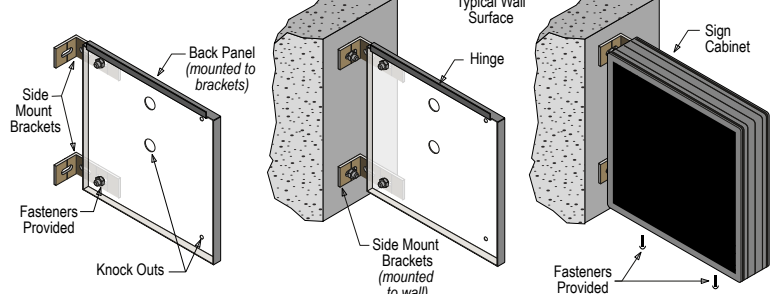 

## Variable Angle Mount

 
 
 
 
 
**Step 1.** Open sign by removing the screws on the bottom of the cabinet.

**Step 2.** Mount the surface bracket to the desired wall, roof or ceiling. (fasteners not supplied)

**Step 3.** Install the sign bracket to the surface bracket using the hardware supplied.

**Step 4.** Mount back panel to sign bracket.

**Step 5.** Hinge sign on back panel and replace the screws that were removed in the first step.

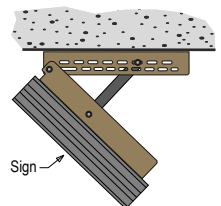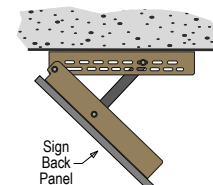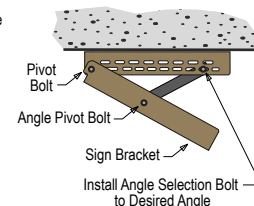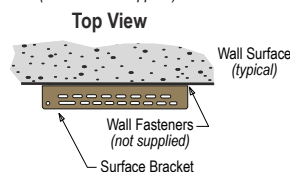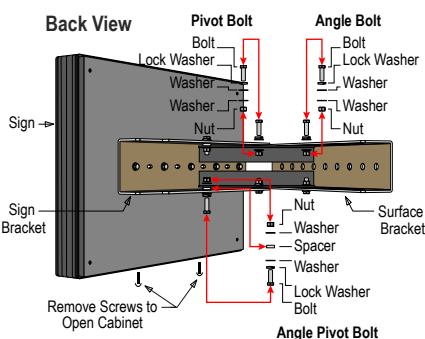


Larger signs will require more than one variable angle mount

Last Revised 6 May 2025 kam

## Recessed Frame Mount




- Step 1.** Open sign by removing the screws on bottom lip of cabinet.
- Step 2.** Slide the Recessed Frame over the cabinet flush with the sign face. Drill into the cabinet using the holes in the Recessed Frame. Fasten frame to cabinet sides.
- Step 3.** Clear all aluminum chips from inside cabinet after drilling. Close cabinet and replace removed screws. Slide cabinet with frame into wall cavity.
- Step 4.** Secure frame and cabinet in wall cavity using appropriate fastening hardware or silicone adhesive between the frame and substrate.

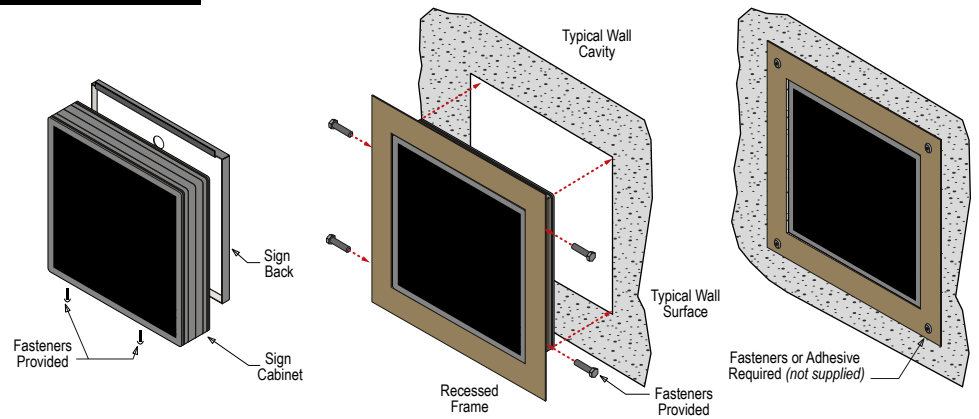





## Side/Ceiling Mount for 5½" & 7½"d Frames

- Step 1.** Remove the mounting brackets from their shipping location on the sign cabinet.
- Step 2.** Align the long side of the brackets to the predrilled holes in the frame and secure with the hardware provided. *(fasteners provided)*
- Step 3.** Mount the shorter side of the brackets to the wall or ceiling surface. *(fasteners not supplied)*

**Side Mount**

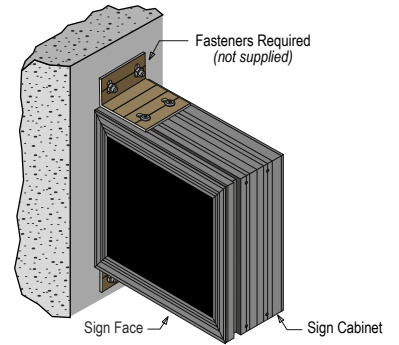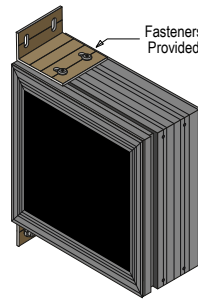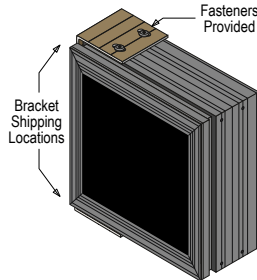

**Ceiling Mount**

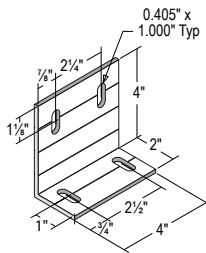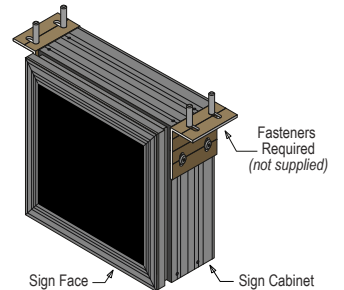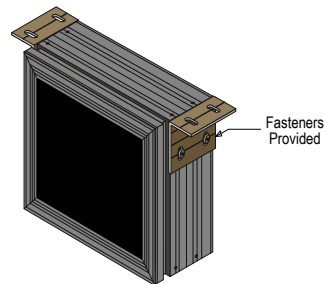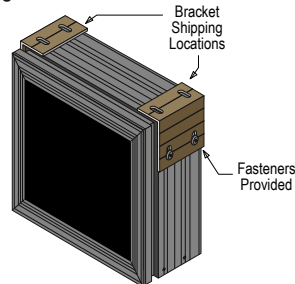    

## Wall Mount for 5½"d Frames

- Step 1.** Remove the mounting brackets from their shipping location on the sign cabinet.
- Step 2.** Align and mount the brackets to the wall surface. *(fasteners not supplied)*
- Step 3.** Reattach the cabinet to the brackets with the hardware provided. *(fasteners provided)*

